



Spare Parts List

Pos.#	Order No.	Description	Qt.
1.	0301-090	screw	4
2.	0343-073	handle	1
3.	0343-071	motor cover	1
4.	0301-077	screw	2
5.	0301-071	snap ring	2
6.	0336-030	connector	1
7.	0335-088	impedance coil	1
8.	0060-072	condenser	1
9.	0336-005	pressure screw	1
10.	0336-006	pressure ring	1
11.	0314-058	seal ring	1
12.	0333-144	screw terminal	1
13.	0060-082	motor housing	1
14.	0060-057	connecting wire	2
15.	0333-016*	carbon brush	2
16.	0050-099	carbon brush housing	2
17.	0050-082	bearing support	1
18.	0301-072	screw	8
19.	0343-086	tie rod	4
20.	0060-051	cooling jacket	1
21.	0343-084	insulating jacket	1
22.	0060-103	label	1
24.	0343-052	clamp	1
25.	0301-048	washer	2
26.	0300-030	screw	2
	0204-137	motor frame assembly	1
		consisting of: items 20,21,24,25,26	
27.	0336-013*	power cable	1
28.	0301-102	screw	4
29.	0333-019*	splash proof protection	1
30.	0335-028S	protection switch	1
31.	0060-071	connecting wire	2
32.	0301-134	snap ring	1
33.	0301-093	ball bearing washer	2
34.	0321-126*	ball bearing	1
37.	0060-068	connecting wire	2
38.	0301-079	screw	2
39.	0301-076	tooth washer	2
40.	0335-054	stator	1
41.	0335-095*	rotor	1
42.	0321-062*	ball bearing	1
43.	0060-080	end plate	1
44.	0343-208	fan	1
45.	0060-059	motor end shield	1
46.	0301-060	washer	4
47.	0301-103	screw	4
48.	0343-333*	upper coupling	1

*recommended spare parts

schematic view on back

