



Spare Parts List

Pos.#	Order No.	Description	Qt.
1.	0301-130	screw	8
2.	0228-000	motor cover	1
3.	0301-125	bearing washer	1
4.	0333-016*	carbon brush	2
5.	0228-001	carbon brush holder	1
6.	0060-057	connecting wire	2
7.	0335-058	stator	1
8.	0028-033	motor housing	1
9.	0314-167	gasket	1
10.	0220-001	grip bottom complete	1
11.	0336-183	earthing lead	1
12.	0336-185	lead	2
13.	0028-003	on/off protection switch	1
14.	0220-002	grip cover & switch	1
15.	0301-220	screw	5
16.	0301-071	snap ring	1
17.	0301-162	screw	1
18.	0301-131	screw	4
19.	0028-032	guide disc	1
20.	0321-331*	ball bearing	1
21.	0335-099	armature	1
22.	0344-373	rubber cap	1
23.	0343-208	fan	1
24.	0336-360	power cable with plug	1
25.	0301-129	washer	1
26.	0301-132	snap ring	1
27.	0301-448	hexagon nut	2
28.	0301-076	tooth washer	2
29.	0028-035	connecting wire	2
30.	0301-148	pressure spring	2
31.	0004-031	rod connector	2
32.	0321-126*	ball bearing	1
33.	0301-134	snap ring	1
34.	0020-100	lower bearing housing	1
35.	0343-333*	upper coupling	1

*recommended spare parts

schematic view on back

