


# BRONZE PEDESTAL RUBBER IMPELLER PUMP

## RUBBER IMPELLER PUMPS SERIES 201M

## PERFORMANCE

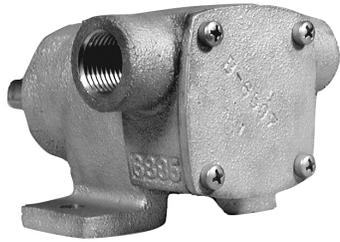

### FEATURES

- Bronze Construction - Corrosion Resistance
- Large Suction and Discharge Ports
- Polytetrafluoroethylene (PTFE) Barrier Seals Protecting Ball Bearings
- Mechanical Carbon Ring, Ceramic Face Main
- Pump Seal Standard, Optional Nitrile Lip Seal
- Two Sealed Ball Bearings Spaced for Maximum Load Ability
- Large Vent & Drain Openings Separate Seal & Bearing Areas
- Shaft Slinger for Additional Bearing Protection
- Neoprene Impeller Standard, Nitrile Impeller Optional
- Passivated 316 Stainless Steel Shaft
- Extra Capacity Ball Bearings plus Rugged Construction for Prolonged Service Life
- Impeller & Cam Easily Replaced


### DRIVE

Direct drive with flexible coupling or pulley drive can be used. Make sure both flexible coupling halves are properly aligned. When using pulley, do not over-tighten belt.

### LIQUIDS AND TEMPERATURE

Liquids compatible with neoprene can be pumped including fresh and salt water solutions and mild chemicals. Do not pump severe solvents or acids. When possible, flush pump with fresh water after each usage. Nitrile impellers can handle oil contaminated water and kerosene at reduced impeller service life. Extremes of cold and heat will affect impeller life. Limits of 40o to 180 o F should be observed. Do not allow liquid in pump to freeze. Drain pump by loosening cover screws. Use methyl alcohol based anti-freeze compounds such as Zerex, Shell Zone, Pyro Permanent, Permagard, and Dowgard.


Water 70°F 201M Performance

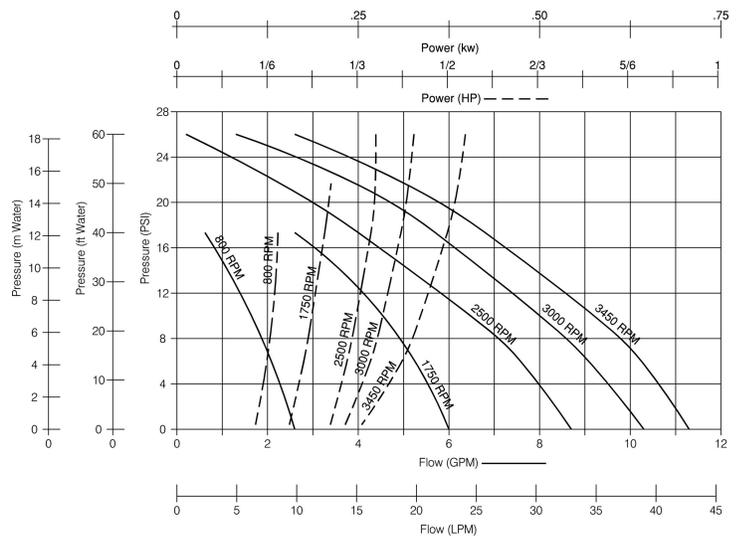

## SUCTION LIFT

Suction lift of 15 ft. is possible when impeller is wet. Suction lines must be air tight in order for pump to self prime. A foot valve at the beginning of suction line is recommended.


## EXPLODED VIEW AND PARTS LIST

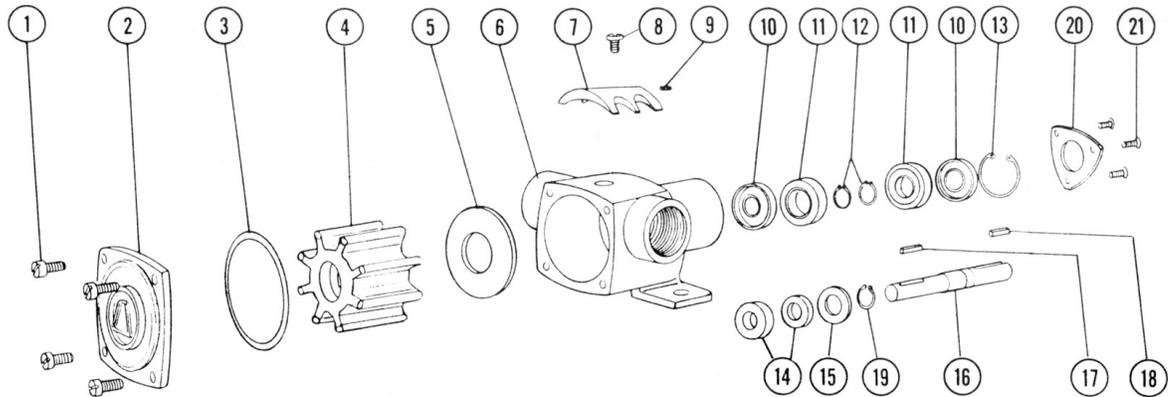


Pump No.	1	2	3 <sup>1</sup>	4 <sup>1</sup>	5	6	7	8	9	10	11	12	13 <sup>1</sup>	14	15	Repair Kit <sup>1</sup>
	Screw	Cover	Gasket	Impeller	Wear Plate	Body	Cam	Screw	Seal Bearing	Ball Bearing	Snap Ring	Snap Ring	Mech/Lip Seal	Washer	Shaft	
	4 Reqd	1 Reqd	1 Reqd	1 Reqd	1 Reqd	1 Reqd	1 Reqd	1 Reqd	1 Reqd	1 Reqd	2 Reqd	2 Reqd	1 Reqd	1 Reqd	1 Reqd	
201M	5385	6597	7547	6593	6929	6885	6592	7300-41	6609	5928	5926	5925	32230	6631	6886	10832
201M-01	5385	6597	7547	6593	6929	6885	6592	7300-41	6609	5928	5926	5925	5463	6631	6886	12124
201M-05	5385	6597	7547	8514	6929	6885	6592	7300-41	6609	5928	5926	5925	5463	6631	6886	12186

<sup>1</sup> Repair Kit contains items 3, 4, & 13.

## DIMENSIONS

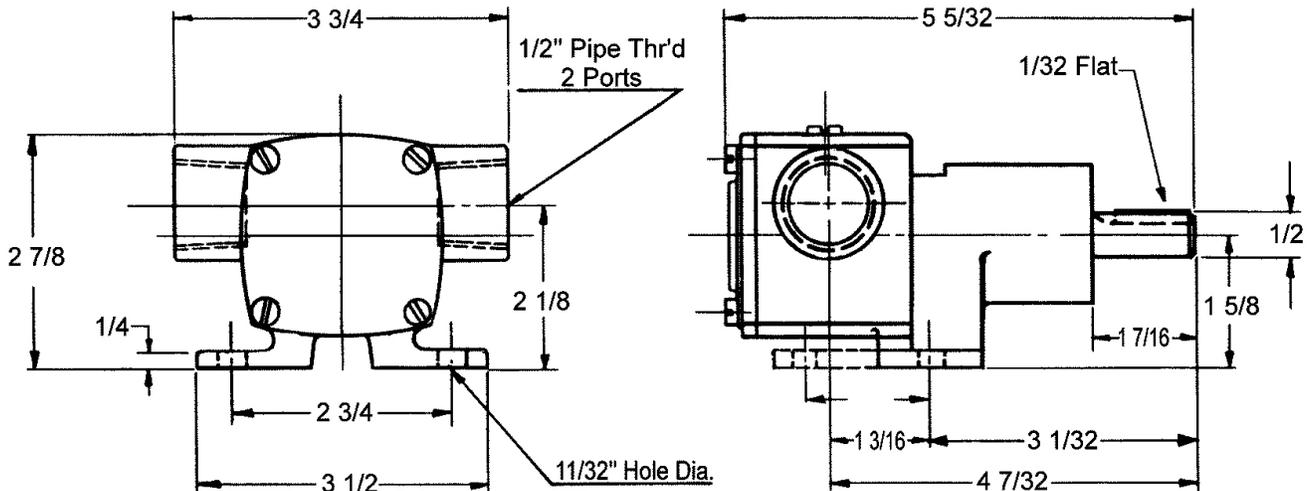

## ROTATION

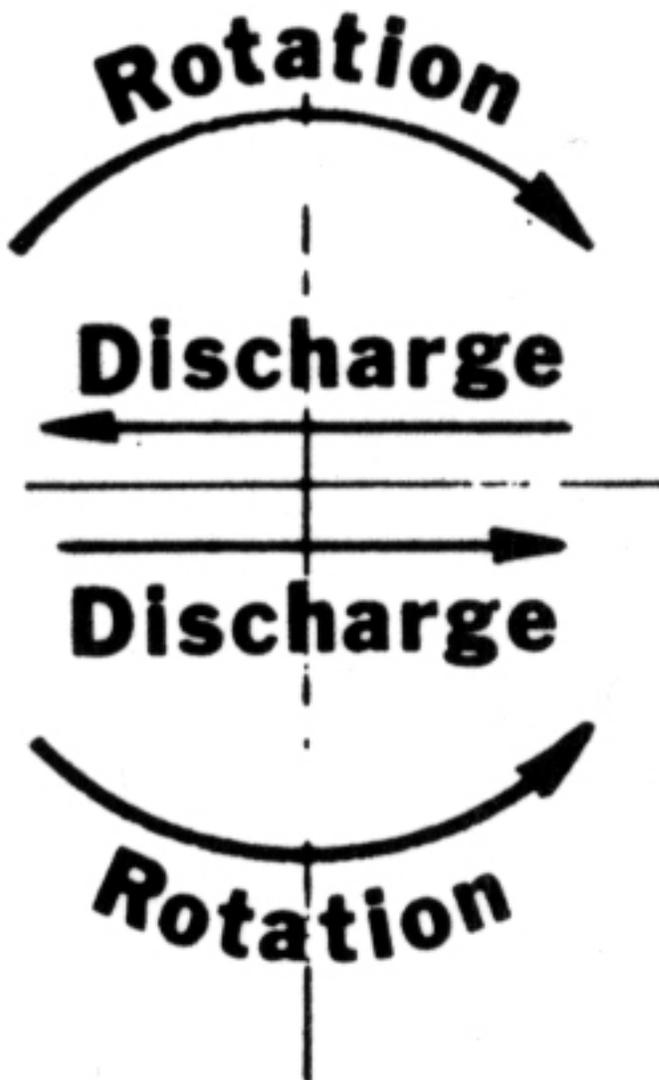

### IMPELLER REPLACEMENT

The impeller must be replaced if it is worn out or has been damaged by debris or by running the pump dry. Symptoms of a defective impeller are low pumping pressure and low flow causing overheating of the boat engine. Poor pump performance can also be caused by slippage of V-belts, so belts should be checked for tightness.

To replace the impeller remove screws and cover. Pull out the impeller with needle nose pliers or two screwdrivers. Be careful not to dent the pumping chamber with these tools. When inserting new impeller, line up key slot in impeller with the key in the shaft. Use oil on shaft and avoid forcing the impeller onto the shaft.

The impeller should also be removed for storage periods to prevent the blades from taking a permanent set.

### SEAL REPLACEMENT

Pump will operate satisfactorily when mounted in any position. DO NOT RUN DRY. Rubber impeller pumps generate high rubbing friction unless lubricated by liquid being pumped. Lack of liquid will cause impeller to burn up.

If water drips from the weep hole or from the area where the shaft exits the pump, the seal is defective and must be replaced. While the Polytetrafluoroethylene (PTFE) barrier seal provides a first line of defense, prolonged running of the pump with a leaky seal can destroy the ball bearings resulting in catastrophic pump failure and engine shut-down. For seal replacement, the pump must be removed from the engine and disassembled in order to gain access to the seal area. Where mechanical seals are used, both components (stationary and rotating member) must be replaced at the same time. Lip seals must be pushed out

of their press-fitted position and new seals pressed into place, using a sealant on the outside of the lip seal housing. Refer to exploded view drawings for seal location and part numbers for ordering purposes.

**ADDITIONAL**

Pump Model	RPM	Feet Hd.	0	20	40	60	80
		PSI	0	8.7	17.3	26.0	34.6
201M	800	GPM	2.6	1.8	0.62	---	---
		HP	1/6	1/6	1/6	---	---
	1750	GPM	6.0	4.8	2.6	---	---
		HP	1/4	1/4	1/4	---	---
	2500	GPM	8.7	6.9	4.0	0.2	---
		HP	1/3	1/3	1/3	1/3	---
	3000	GPM	10.3	8.4	5.7	1.3	---
		HP	1/3	1/3	1/3	1/3	---
	3450	GPM	11.3	9.6	6.8	2.6	---
		HP	1/3	1/2	1/2	1/2	---

Pump	Seal	Impeller
201M	Buna N Mechanical	Neoprene
201M-01	Buna N Lipseal	Neoprene
201M-05	Buna N Lipseal	Buna N